


中空扳手工作头参数

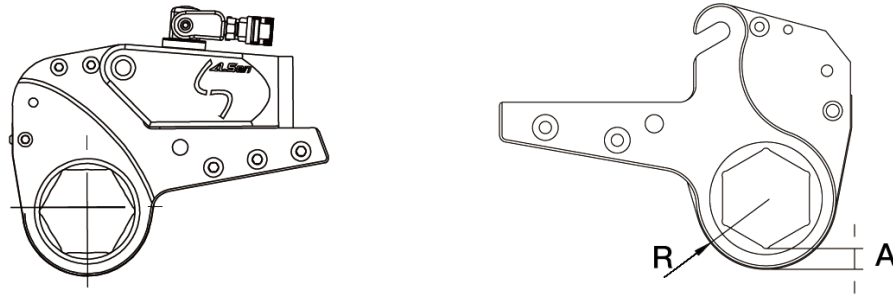

螺栓直径 Bolt Dia. (M)	螺母对边 Across flat (mm)	HW-2			HW-4			HW-8			HW-14			HW-30		
		工作头型号 link model	R (mm)	A (mm)	工作头型号 link model	R (mm)	A (mm)	工作头型号 link model	R (mm)	A (mm)	工作头型号 link model	R (mm)	A (mm)	工作头型号 link model	R (mm)	A (mm)
12	19	HW-2/S19	27	16												
14	22	HW-2/S22	27	14												
18	27	HW-2/S27	27	11												
20	30	HW-2/S30	29	12												
	32	HW-2/S32	29	11												
22	34	HW-2/S34	31	11	HW-4/S34	36	16									
24	36	HW-2/S36	31	10	HW-4/S36	36	15									
27	41	HW-2/S41	34	10	HW-4/S41	39	15	HW-8/S41	46	22						
30	46	HW-2/S46	37	10	HW-4/S46	42	15	HW-8/S46	46	19						
33	50	HW-2/S50	40	11	HW-4/S50	44	15	HW-8/S50	46	17	HW-14/S50	60	31			
36	55	HW-2/S55	43	11	HW-4/S55	46	14	HW-8/S55	50	18	HW-14/S55	60	28			
39	60	HW-2/S60	46	11	HW-4/S60	50	15	HW-8/S60	52	17	HW-14/S60	60	25			
42	65				HW-4/S65	53	15	HW-8/S65	55	17	HW-14/S65	60	22			
45	70				HW-4/S70	56	15	HW-8/S70	58	17	HW-14/S70	60	19			
48	75				HW-4/S75	59	15	HW-8/S75	60	17	HW-14/S75	63	19			
52	80				HW-4/S80	61	15	HW-8/S80	63	16	HW-14/S80	66	19			
56	85							HW-8/S85	66	16	HW-14/S85	69	19	HW-30/S85	78	28
60	90							HW-8/S90	69	7	HW-14/S90	72	20	HW-30/S90	78	27
64	95							HW-8/S95	71	16	HW-14/S95	74	19	HW-30/S95	83	28
68	100							HW-8/S100	75	17	HW-14/S100	77	19	HW-30/S100	83	25
72	105							HW-8/S105	78	17	HW-14/S105	80	19	HW-30/S105	89	28
76	110										HW-14/S110	83	19	HW-30/S110	89	25
80	115										HW-14/S115	87	20	HW-30/S115	95	28
	117										HW-14/S117	87	19	HW-30/S117	95	27
85	120													HW-30/S120	95	25
	125													HW-30/S125	101	29
90	130													HW-30/S130	101	26
95	135													HW-30/S135	104	26
	140													HW-30/S140	110	29
100	145													HW-30/S145	110	26
105	150													HW-30/S150	116	29
110	155													HW-30/S155	116	26
	160													HW-30/S160	128	36
115	165													HW-30/S165	128	33
120	170													HW-30/S170	128	30
	175													HW-30/S175	128	27